

CLEAR TABS



Tabs are used with the **Blueliquid SRBLPE+** solution in biological cleaning parts washer, at ambient temperature. They extend the lifetime of the cleaning solution in the biological parts washer, reduces sludge from degreasing by biodegradation and neutralises odours. Tabs are composed of a selection of micro-organisms that are specifically suitable for the bioremediation of grease and oil: **BLUEREMEDIS Tab process®**.

FOR PROFESSIONAL USE



NO HAZARDOUS



ENVIRONMENTALLY
FRIENDLY



INCREASE PARTS WASHER
BATH TIME LIFE


Instructions for use

When installing your biological parts washer, put a tab into the parts washer reservoir to start the **BLUEREMEDIS Tab process®** (or 1 tab for approximately 2.64 gal of solution). Add a tab every 4 to 6 weeks, depending on condition of use of your biological parts washer.

Warning: wearing gloves, work clothing is recommended.
Follow simple health and safety measures: do not eat or drink in the work place, wash hands after using the parts washer.

Blueremedis Tab process®

The micro-organisms are present in their natural state in all environments and they have capacities to degrade organic composites for their nutritional requirements and growth.
The tabs process optimises this biodegradation, associating the micro-organism tabs with BlueLiquid in a biological parts washer.

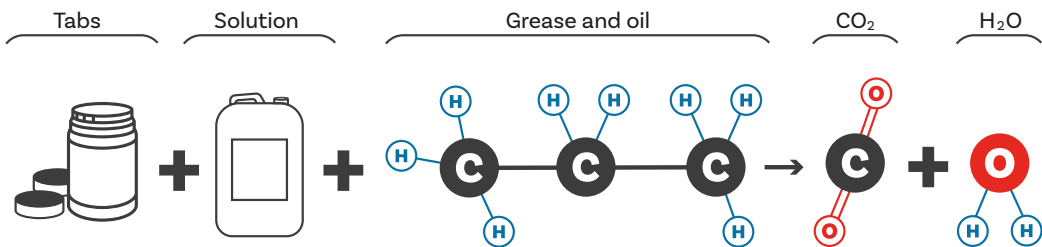

Properties

Color	White
Aspect	Solid
Scent	None
Temperature of use	41-113°F
Bacteria concentration (SM9215C)	4 billion UFC/tab
Weight	0.2 oz
Solubility in water	100%

For further information, please contact us or see the SDS for this product.

Those tablets are not classified as irritants for eyes and skin.
Tablets are a synergistic blend of all natural, Class 1 bacteria specifically chosen for their accelerated ability to metabolize heavy, tarry types of hydrocarbons such as oil, coal tars and organic sludge's as well as refined hydrocarbon products. Those tablets contain multiple microbial strains that were scientifically selected due to their unique ability for high biological activity (90%) in an ambient temperature environment.

Storage

Store in a cool, dry place away from light and heat.

Product reference packaging

Box of 6 tabs: **SFCOFOMCT1**

SRI_US_TDS_Clear Tabs_Oct 24

The information in this sheet expresses our knowledge and results from tests performed with objectivity as a constant priority. On no account may this information be considered as a guarantee, or an engagement of our responsibility in the event of improper use. Before using the product, tests should be performed to check that the methods of use and conditions of application are satisfactory. Our specialists are available for users to assist them in finding the best solutions for their requirements.